



LED LINEAR T8 PLUG & GO

ELECTRONIC BALLASTS REQUIRED

INSTALL INSTRUCTIONS



SAFETY INFORMATION

PLEASE READ OVER ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE LAMPS AND KEEP THIS SHEET FOR FUTURE REFERENCE.

WARNING: Risk of shock. Disconnect power before installation.

- LED T8 lamp for use only with products described and installed in accordance with product specifications. Operates on Instant Start, Program Start and Rapid Start T8 Electronic Ballasts.
- Check the lamp before installation, if there is any damage caused during transportation, do not install.
- Maintenance should be carried out by technical personnel only.
- Do not stare at the light source with unprotected eyes for a long time.
- Do not place any objects on lamp.
- Keep the lamp away from flame or high temperature objects.
- These lamps are a direct replacement for T8 lamps only.
- Not for use with dimmers.
- Suitable for Damp Locations
- FOR EMERGENCY LIGHTING WHEN ONLY WITH Ballast - Listed (FTBR/7), PHILIPS EMERGENCY LIGHTING (E49328), Model B50 (Alternate RS), Rated 120/277V, 50/60Hz, Damp Location Fluorescent Emergency Ballast.

CAUTION: RISK OF FIRE.

DO NOT INSTALL THIS LAMP IN A PRE-HEAT LUMINAIRE.

CAUTION RISK OF FIRE-IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT MANUFACTURER



THIS LAMP OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE THE LAMP FROM THE LUMINAIRE AND CONTACT THE MANUFACTURER OR QUALIFIED ELECTRICIAN.

INSTALL INSTRUCTIONS

1. Make sure the Power is OFF
2. Remove lens or diffuser (if applicable).
3. Remove the existing fluorescent lamp. (Fig. 1)
4. Insert LED T8 replacement lamp, rotate lamp until the pins lock in place. (Fig. 2)

Make sure that the pins are completely seated in the lampholders. Repeat steps 3 and 4 as need for each fluorescent lamp.

5. Replace lens or diffuser (if applicable).
6. Installation complete, restore power.

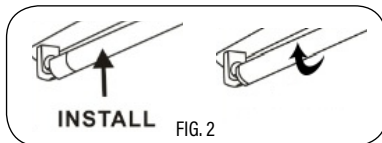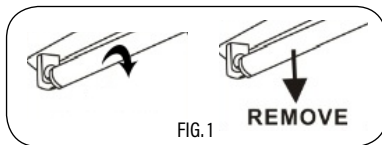

MAINTENANCE NOTES:

- Disconnect power before maintaining.
- Clean lamp with a dry cloth.
- Do not clean the lamp with corrosive chemicals.