EMERGENCY PACK - 55718

INSTALLATION INSTRUCTIONS




PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Read the instructions before installing or use.

SAFETY INSTRUCTIONS

- Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED Emergency Pack. Check for enclosed wiring and components.
- Risk of fire or electric shock. This LED Emergency Pack installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt
 installation. Contact a qualified electrician.
- Before installing, make certain the AC power to the fixture is off.
- The electrical rating of this product is 100-277V. Installer must confirm that the supply voltage is correct before installation.
- To prevent electrical shock, only connect battery connector after installation is complete and before the AC power to the fixture is back on.
- This LED Emergency Pack requires an un-switched AC power source of 100-277V, 50/60Hz. The fixture AC driver must be on the same branch circuit as the LED Emergency Pack.
- · Do not use outdoors.
- Do not let power supply cords touch hot surfaces.
- Do not mount near gas or electric heaters.
- The LED Emergency Pack is for use with grounded, UL Listed LED luminaires, and shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire.
- Verify that luminaire is suitable for use with this emergency pack.
- The battery pack is installed by screws and the indicator light is installed on the surface of luminaires.
- Equipment should be mounted in locations and at heights where it is not be subjected to tampering by unauthorized personnel.
- · The use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition.
- Do not use this equipment for other than its intended use.
- Use with grounded, UL Listed, dry or damp location rated fixtures where the ambient temperature is 32° F minimum, 122°F maximum. (0°C ~ 50°C)
- Not for use on fixtures over 150W

GENERAL WIRING DIAGRAM



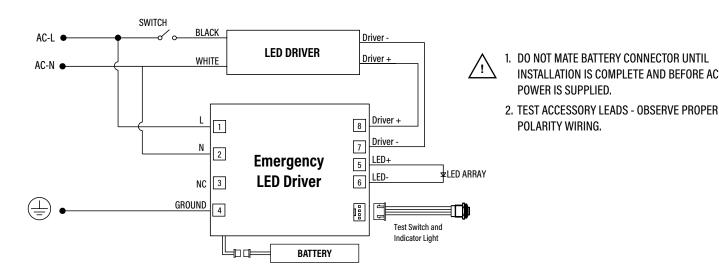

INDICATOR LIGHT KEY

1. Red/ON: Charging or Fully-charged

2. Red/OFF: Discharge or AC Power is off

Red ON Charging or Full-charged



TEST SWITCH KEY

Press the test switch to confirm whether emergency function is normal.

