

ARA™ ARCHITECTURAL DESIGNER STRIP

INSTALL INSTRUCTIONS



PLEASE USE A QUALIFIED ELECTRICIAN FOR INSTALLATION. Read the instructions before installing or use of the luminaire.

WARNING, CAUTIONS AND OPERATING INSTRUCTIONS

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING: RISK OF FIRE OR ELECTRICAL SHOCK

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION: RISK OF INJURY


- Avoid staring directly at the light source for prolonged periods.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool before handling fixture.
- Green ground screw provided in proper location. DO NOT RELOCATE.
- Minimum 90° supply conductors.
- Ambient operating temperature range: -4°F to 122°F
- Suitable for Dry or Damp locations.

GENERAL INFORMATION



WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

WIRING DIAGRAM

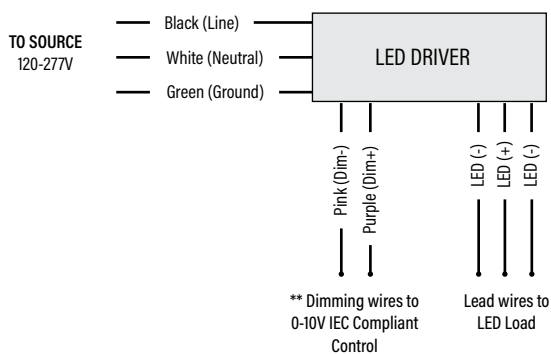


Note: If not connecting to an external 0-10V dimmer circuit, make sure fixture's 0-10V pink and purple leads are capped off separately. Failure to do so may cause fixture to perform incorrectly, and void warranty.

FIELD ADJUSTABLE WATTAGE & CCT

Users can adjust lumen output and color temperature via two slide switches on the driver box. The wattage switch provides 4 output levels, and the CCT switch has 5 settings (30K, 35K, 40K, 50K and 65K).

1. Switches are located on the side of the fixture.
2. Select a wattage and color temperature by sliding switch left or right respectively to the desired value.

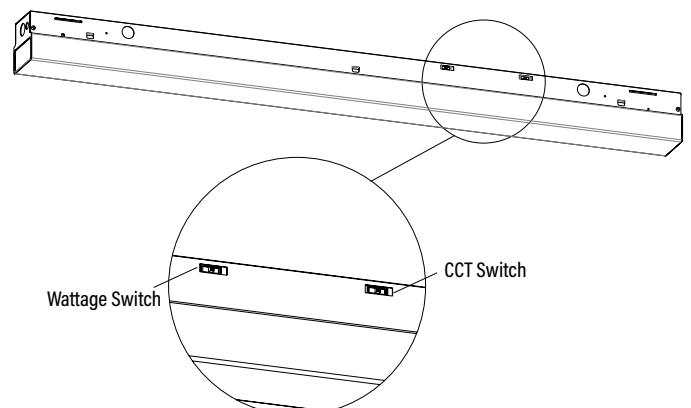

ARA™ ARCHITECTURAL DESIGNER STRIP


INSTALL INSTRUCTIONS

M20
ARCHITECTURAL


SURFACE MOUNT INSTALLATION




WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

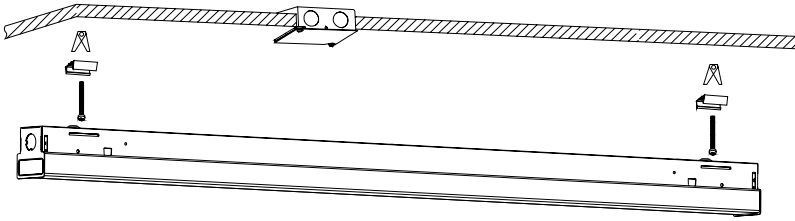


1. Secure the provided brackets onto the ceiling by using installer-provided toggle bolts.

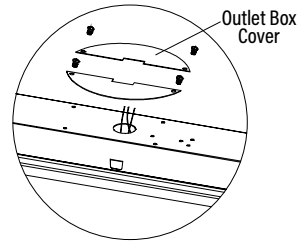


2. Screw the covers at the outlet to the back of the housing.

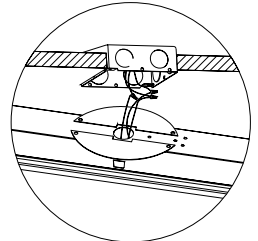

3. Wire to main power through the junction box.

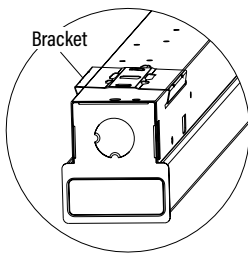

 4. Then clip the brackets to the slots of fixture.





SUSPENDED MOUNT INSTALLATION



WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

CHAIN MOUNTING WITH V-HOOK

CABLE MOUNTING WITH V-HOOK

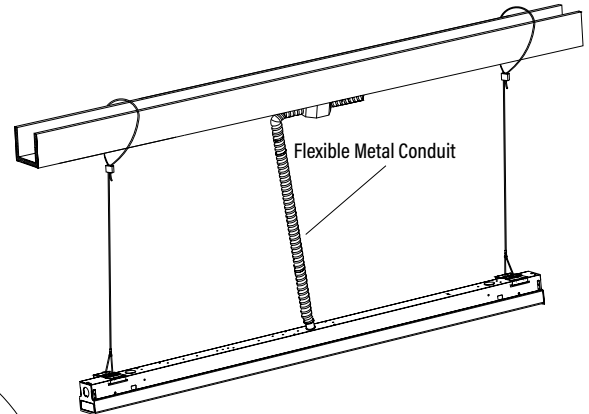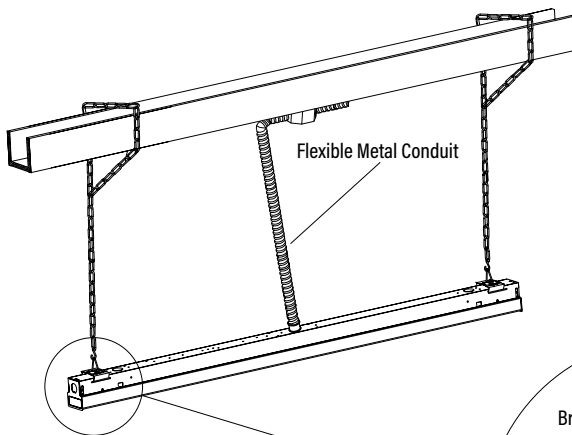

1. Clip the brackets to the slots of fixture.
2. Attach customer supplied V-hooks to brackets.
3. Attach customer supplied chain or cable to the V-hooks and mounting surface.
4. Wire to main power.

