

LANDSCAPE LIGHTING - FLOOD

INSTALL INSTRUCTIONS

PQL
PREMIUM QUALITY LIGHTING®

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire.

- Turn circuit breaker(s) off or remove fuse(s) before installation.
- Fixture(s) must be installed in accordance with all local codes and ordinances.
- DO NOT install within 10 feet of a pool spa or fountain.
- SUITABLE FOR MOUNTING WITHIN 4 FT OF THE GROUND.
- SUITABLE FOR WET LOCATIONS.

SAFETY INFORMATION - TO REDUCE THE RISK OF FIRE, OR INJURY TO PERSONS:

- Turn off/unplug and allow to cool before replacing lamp.
- Lamps get hot quickly. Contact only switch plug when turning on.
- Do not touch hot lens, guard or enclosure.
- Keep lamp away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
- Do not operate the luminaire fitting with a missing or damaged shield.


SAVE THESE INSTRUCTIONS

! WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

This is a low voltage fixture for use with a maximum of 25A, 15V power units. A remote transformer is required. The main cable from the power units should be buried for less than 6 inches under the ground level and can be purchased.

LUMINAIRE MOUNTING (with PVC Spike)

1. Run the wire pigtail from luminaire through the mounting hole on top of the PVC Spike.
2. Thread the PVC Spike into the fixture.
3. Remove lens cover assembly, push the bulb pins into the socket holes carefully, until seated, then replace the lens cover.
4. Place PVC Spike in the desired position and insert into the ground until the flange of the PVC spike is flushed to grade level.
5. Attach fixture(s) wires pigtail to main supply cable with connector (not provided) suitable for direct burial.
6. Aim luminaire to desired angle. Lock into place by tightening the screw in adjustment knuckle.
7. Provide power to the luminaire and check the proper operation.

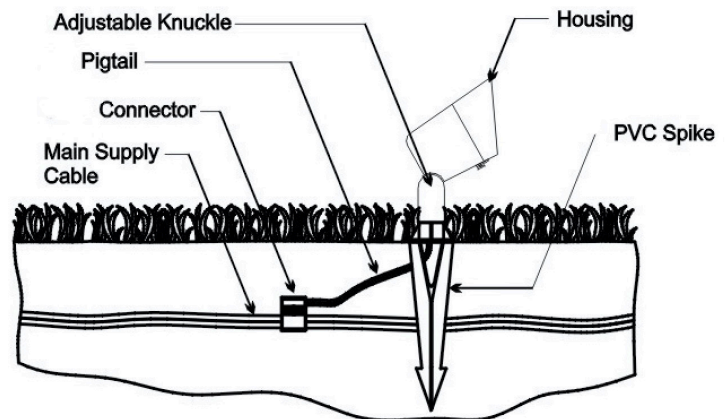

LAMP REPLACEMENT

1. To prevent electrical shock, disconnect transformer from electrical supply before service.
2. Remove lens cover to expose lamp.
3. Replace lamp with correct wattage and type marked on fixture label. Replace lens cover.

Note: DO NOT touch lamp with bare hands. Always use a soft cloth to handle lamps.