

## LED LINEAR U6/T8 PLUG & GOTM

 
INSTALL INSTRUCTIONS




## **SAFETY INFORMATION**

## PLEASE READ OVER ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE LAMPS AND KEEP THIS SHEET FOR FUTURE REFERENCE.

- These lamps are a direct replacement for 32W T8 U-bend lamps only.
- Not for use with dimmers.
- · Operates on Instant Start Electronic Ballast only.
- Risk of Fire Do not install this lamp in a preheat luminaire
- Risk of Electric Shock Use in Dry Locations Only.
- This device is not intended for use with emergency exit fixtures or emergency exit lights.




## **INSTALL INSTRUCTIONS**

 

**1.** Turn off the power to the luminaire before removing the lamp.



 **2.** Remove the diffuser lens/cover (if applicable).




**3a.** Remove the fluorescent lamp.



**3b.** Then, remove the lamp from lampholder.



 **4a.** Insert the LED T8 replacement lamp.




**4b.** Make sure that the pins are completely seated in the lampholders.

Repeat steps 3 and 4 as need for each fluorescent lamp.



 **5.** Replace the diffuser lens/cover (if applicable).



**6.** Turn the power to the luminaire back on.

CAUTION: IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING ETC.) IMMEDIATELY TURN OFF POWER. REMOVE LAMP FROM LUMINAIRE AND CONTACT THE MANUFACTURER.

CAUTION: RISK OF FIRE. DO NOT INSTALL IN A PREHEAT LUMINAIRE.

THIS LAMP OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE THE LAMP FROM THE LUMINAIRE AND CONTACT THE MANUFACTURER OR QUALIFIED ELECTRICIAN.