

# LED TROFFER RETROFIT INSTALL INSTRUCTIONS



### PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION.

Please read the instruction before you install and use the luminaire.

## **SPECIFICATIONS**

ITEM#	DESCRIPTION	WATT	COLOR	LUMENS	CRI	VOLT	HOURS	CASE
55160	LED 2 X 2 TROFFER RETROFIT/CENTER BASKET - 30W/40K/120-277V/DIMMABLE - SL®	30	4000K	2939	85	120-277	50,000	1
55162	LED 2 X 4 TROFFER RETROFIT/CENTER BASKET - 45W/40K/120-277V/DIMMABLE - SL®	45	4000K	4305	86	120-277	50,000	1

## INSTALLATION





1. Turn off the fixture, remove existing lens of louver or troffer.



**2.** Remove exiting lamps and ballast cover then disconnect power.



**3.** Install supplied brackets and then the completely assembled fixture in bracket holes.

### Label location




4. Reconnect wiring to the retrofit kit.



5. Close the lens and secure latches.

#### WIRING DIAGRAM

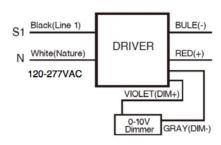

Please check DLC website for the most current list of approved items - www.designlights.org Published lumens on LED products are approximate and may vary slightly.