



PREMIUM QUALITY LIGHTING

# LED SHOE BOX RETROFIT

75W / 105W  
INSTALL INSTRUCTIONS



## SPECIFICATIONS

ITEM#	DESCRIPTION	WATTS	COLOR	LUMENS	CRI	VOLT	HOURS
83401	LED 75W SHOE BOX RETROFIT/110°/4500K/347-480V V4 - SUPERIOR LIFE®	75	4500K	9872	75	347-480V	50,000
83454	LED 75W SHOE BOX RETROFIT/110°/5000K/100-277V V4 - SUPERIOR LIFE®			9793		100-277V	
83407	LED 75W SHOE BOX RETROFIT/110°/5000K/347-480V V4 - SUPERIOR LIFE®		5000K	10014		347-480V	
83460	LED 105W SHOE BOX RETROFIT/110°/5000K/100-277V V4 - SUPERIOR LIFE®	105		14528		100-277V	
83404	LED 105W SHOE BOX RETROFIT/110°/5000K/347-480V V4 - SUPERIOR LIFE®			14324	347-480V		

Operation temperatures between -35°C and 55°C

Published lumens on LED products are approximate and may vary slightly.

## SAFETY INSTRUCTIONS

**PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION.**

Please read the instruction before you install and use the luminaire.

FOLLOW ALL SAFETY INSTRUCTIONS

**DANGER –RISK OF SHOCK –DISCONNECT POWER BEFORE INSTALLATION**

**WARNING** –Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Product must be installed in accordance with the National Electrical Code or your local electrical code. If you are not familiar with these codes and requirements, contact a qualified electrician.

**WARNING** –Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/ or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **WARNING** –To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or any other sharp objects.

**WARNING** –Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when installing of retrofit kit hardware. Check for enclosed wiring and components.

**WARNING** –Risk of fire or electric shock. Check the existing wiring for damage before installing upgrade kit.

Do not install if existing wires are damaged.


**DO NOT USE WITH DIMMERS. SUITABLE FOR DRY LOCATIONS. SUITABLE FOR USE IN TOTALLY ENCLOSED LUMINAIRES.**

**THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.**



## INSTALLATION BY “L” BRACKET

1. Mount the LED head to the U bracket (Fig A).
2. **TURN OFF ALL POWER TO THE FIXTURE.** Remove bulb and existing ballast or cut the wires to the ballast and bypass it.
3. For Longest Life & Keeping the LED Head & Driver cool - **PERMANENTLY REMOVE THE FIXTURE'S REFLECTOR. RETROFIT WARRANTY IS VOID IF THE FIXTURE'S REFLECTOR IS NOT REMOVED.**
4. Wipe excess dust from inside the fixture. Clean the fixture's glass if dirty.
5. Mount the L bracket (Fig B) to the fixture, where the existing socket is mounted.
6. Mount the U bracket to the L bracket. (Fig C)
7. Adjust the retrofit head angle and position so that it provides the best lighting.
8. Remove the PC cover on LED head. The PC cover is only meant to protect the LEDs during transportation and installation. (Fig D).
9. **BE SURE THAT NOTHING WILL TOUCH OR FALL INTO THE FAN BLADES AFTER THE FIXTURE IS MOUNTED.**

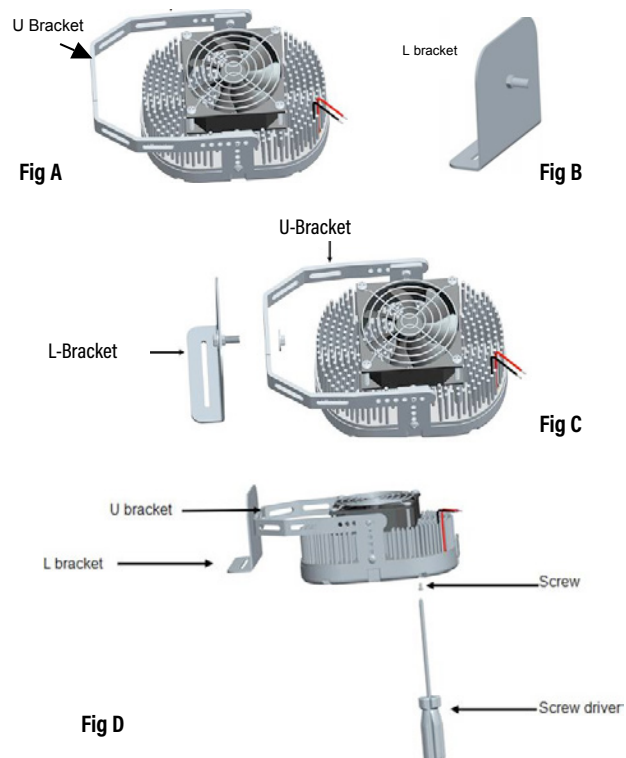



PREMIUM QUALITY LIGHTING

# LED SHOE BOX RETROFIT


75W / 105W

INSTALL INSTRUCTIONS




## INSTALLATION BY FLAT MOUNTING PLATE

A "flat mounting plate" is also provided. The "flat mounting plate" could be used instead of the "L bracket" above and this follows the same basic mounting steps. See (see Fig. E & F).

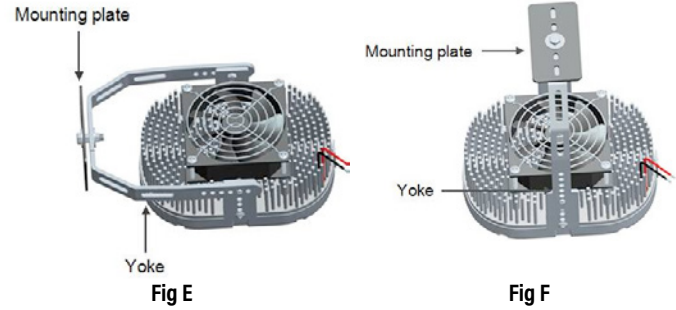


## WIRING

1. Install the LED driver in place of the ballast. Wire the input source to the LED driver. The proper AC input connections to the driver are marked on the driver. There is a Ground, ACN (Neutral) and ACL (Line)
2. Attach the driver output to the input wires of the LED Head: Connect Red Wire to Red Wire of the LED light, and Black Wire to Black Wire of the light.
3. Re-assemble remaining parts of the fixture and restore power.
4. Never dim a non-dimmable LED driver. Not intended for use with emergency exits.
5. VERY IMPORTANT: MAKE SURE THE WIRING IS PROPERLY GROUNDED.

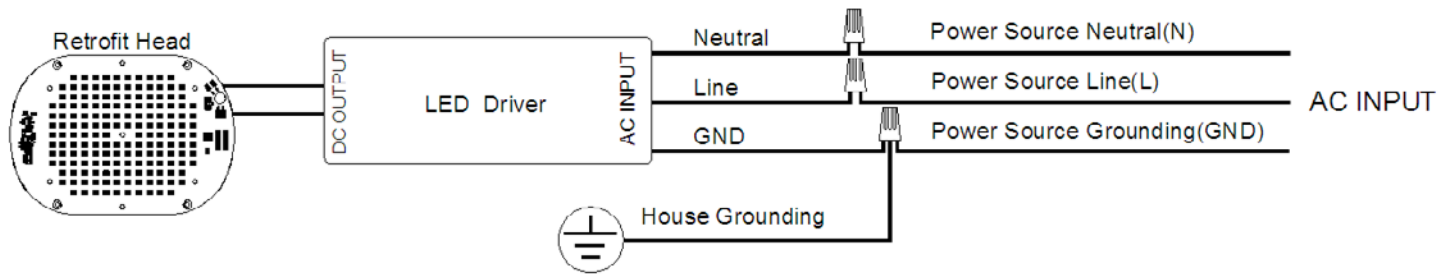

## INSTALLATION EXAMPLES

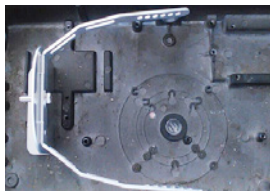

Wall Pack Installation



Shoe Box/Flood/Area Fixture Installation



High Bay and High Mast Installation